

ase
0

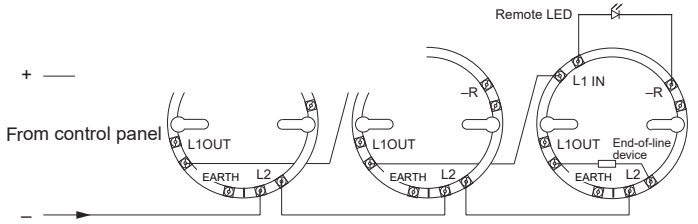

Wiring diagram of monitored Series 65 zone

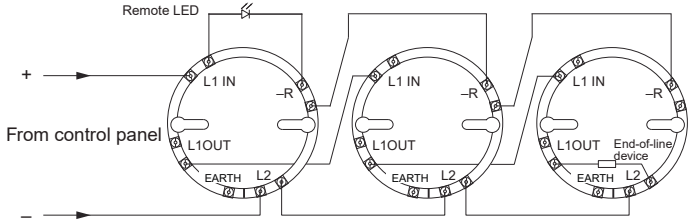

Wiring diagram of monitored Series 65 zone with common remote indicator

Note: L1 must be connected to positive line if a remote indicator is connected. An 'EARTH' terminal is provided for zone wiring continuity.

© Copyright Apollo Fire Detectors Limited 2012
Apollo Fire Detectors Limited, 36 Brookside Road, Havant, Hants, PO9 1JR, UK
Tel: +44 (0) 23 9249 2412 Fax: +44 (0) 23 9249 2754